

COMMERCIAL FITNESS

4FRONT

THE 4FRONT COMMITMENT

THE ULTIMATE COMMERCIAL FITNESS TREADMILL

You have spoken and we have listened. The 4Front treadmill is the culmination of 40 years of WOODWAY design and innovation. We have taken our time-tested and proven Slat Belt design and built an all new treadmill from the ground up that takes into account all factors of the Commercial Fitness Industry. We are taking things to a whole new level.

COMFORT FOR YOUR MEMBERS


There are conventional treadmills and then there are Slat Belt treadmills by WOODWAY USA. Our patented running surface is unlike any other. Your members will rave about how great it feels to run on our rubberized slats. Their joints and connective tissues will also take notice.

Do you hear that? Neither do we. Our rubberized slats absorb footstrike which makes running on the 4Front nearly silent. So your members can enjoy their workout, talk with a neighbor or turn down the headphones a notch.

MORE ENTERTAINMENT OPTIONS

With the industry's largest HD TV, a full 19", you can be assured members will be drawn to the 4Front treadmill time and again.

Engage, connect and entertain members by adding a 19" Netpulse personalized media platform. On Demand TV, On Demand Music Videos, Personalized Playlists, Online Workout Tracking and Cable TV will keep them coming back to the 4Front time after time. Netpulse media platform is regularly updated rest assure your members will not grow bored with the same old same old.

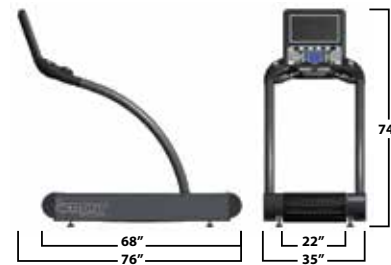

LOWER OVERALL COSTS

Our Slat Belt running surface also has distinct advantages for you and your facility. Lasting up to 150,000 miles without a single belt change or deck swap, it was designed to make up for conventional treadmills shortcomings, most notably wear and friction. The rubberized slats are built like a tank, literally. With 114 ball bearings, the belt glides which results in years of life with very little maintenance and up to 50% in electrical savings. There is also no need to adjust and tension the belt as our design utilizes tracking rollers and a toothed pulley.

The all new 4Front Slat Belt improves upon the industry's best running surface with a unique hexagon design and moves the logo to the sides, improving the wear pattern. The result is a running surface that can incur five times more usage without signs of visible wear.

The end result? The lowest maintenance and lowest total cost of ownership of any treadmill, so you can worry about more important things, like your members.

| 4FRONT



4Front with Standard LED Display

- Easy to use speed, elevation and stop controls
- Multiple LED readouts monitoring speed, incline, distance, time and heart rate
- CSAFE fitness communications compatible



4Front VIEW with Embedded HDTV Display (Standard LED Display)

- 19" LCD HDTV - does not require separate power source
- Convenient treadmill mounted remote control
- 16:9 Aspect Ratio



4Front INTERACT with Embedded Touchscreen Entertainment Powered By Netpulse (Standard LED Display)

Netpulse is a personalized media platform option available on motorized Woodway Slat Belt Treadmills that will engage, connect and entertain fitness club members. A 19" Touch Screen with On Demand TV and Music Videos, Personalized Playlists, Online Workout Tracking and Cable TV will keep members returning to the 4Front for not only the best workout, but the best workout experience. Learn more about getting connected to Netpulse, please visit this web page for more details www.netpulse.com



Personal Trainer Display (Additional Option for All 4Front Displays)

- Menu driven color LCD screen
- 10 pre programmed workouts
- Ability to create custom user workouts (up to 99)
- Fitness testing (pre-loaded U.S. Military, Medical & Fire Department protocols)
- Multiple LED Readouts (speed, incline, distance, calories, time, pace, heart rate and METs)

● Standard Feature ○ Optional Feature

| USER INTERFACE | |
|---|-----------------|
| Coded/Non-Coded Polar Heart Rate Pick-up | ● |
| ANT+ Heart Rate Pick-up | ● |
| Touch Grip Heart Rate Pick-up | ● |
| LED Display Board | ● |
| Personal Trainer Display Board | ○ |
| 19" LCD HDTV | ○ |
| Netpulse Touch Screen | ○ |
| Netpulse Media Gateway | Call |
| Embedded Touch Screen | NA |
| iPod Compatibility | Netpulse Option |
| CSAFE/FitLinxx Compatible | ● |
| Wireless Remote (Controls Treadmill Display Board) | ○ |
| RS-232 Serial Port Interface | ○ |
| PT Pro Software Package (Includes RS 232 Interface) | ○ |
| Wireless Remote (Controls PT Pro Software) | ○ |

| PERFORMANCE SPECIFICATIONS | |
|---|----|
| 0-15% Incline | ● |
| 0-25% Incline | ○ |
| (-3%) - (+22%) Incline | ○ |
| 0-11 MPH (0-18 km/h) | NA |
| 0-12.5 MPH (0-20 km/h) | ● |
| 0-15 MPH (0-24 km/h) | ○ |
| 0-16.5 MPH (0-26 km/h) (Requires 208V/230V) | ○ |
| 0-18 MPH (0-29 km/h) (Requires 208V/230V) | ○ |
| 115 Vac 20 Amp | ● |
| 208/230 Vac 20 Amp | ○ |
| Medical Package (Hospital grade circuitry, reverse & 4 year parts warranty) | ○ |
| Reverse (0-5 mph) | ○ |

| PHYSICAL SPECIFICATIONS | |
|------------------------------------|---|
| Running Surface Dimensions | 22" W x 68" L (55 x 173 cm) |
| User Weight Capacity | Run: 400 lb. / Walk: 800 lb. (4 mph max) |
| Belt Type | 60 Individual Slats |
| Drive System | 114 Precision Ball Bearings with 12 Roller Guides (4 mm lateral tolerance) |
| Running Surface | Vulcanized Rubber (38-43 shore hardness) |
| Drive Motor | 2 hp Continuous (5 hp peak) Brushless Servo |
| Unit Weight | 445 lb. (Shipping Weight 533 lb.) |
| Width | 35" (89 cm) |
| Length | Standard Display: 72" (183 cm) With Entertainment: 76" (193 cm) |
| Height | Standard Display: 64" (163 cm) With Entertainment: 74" (188 cm) |
| Power Supply | 115 Vac 20 Amp Power Supply (Dedicated Circuit & NEMA 5-20R Outlet Receptacle Required) |
| Slate Gray Handrails | ● |
| Efficient AC Brushless Servo Motor | ● |
| Single Handrail | ○ |
| Jump Plate | ○ |
| Off Mount Display | ○ |
| Treadmill Mat | ○ |

Warranty: 5 year drive, motor & belt
3 year all components
1 year labor

TO LEARN MORE, VISIT WWW.WOODWAY.COM
OR CALL 800.WOODWAY TO TALK TO A REPRESENTATIVE.